


CORDLESS RIVET NUT TOOL

FOR BLIND NUT M3 TO M8

ELEMENT 8



ELEMENT
EIGHT 8

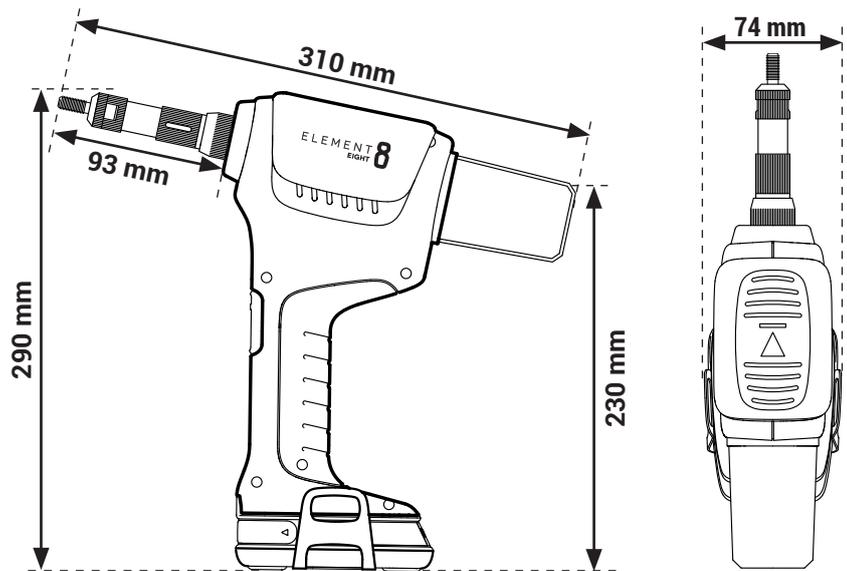

SPECIFICATIONS

Capacity:
Blind nuts M3 to M8

Traction power:
22 500 N

Stroke:
8 mm

Weight (incl. battery):
2.37 kg

Battery:
18 V Li-ion - 2.0 Ah with
charger indicator.

Charger:
18V - battery charging time 2.0
Ah = 100 % in 30 minutes

Warranty:
1 year

Battery autonomy with 1 charge:

NUTS	MATERIAL	NUMBER OF PART/BATTERY
CYLINDRICAL M8	Steel	700
HEX M8	Steel	500

CAPACITY

NUTS	M3	M4	M5	M6	M8
ALUMINIUM	✓	✓	✓	✓	✓
STEEL	✓	✓	✓	✓	✓
STAINLESS STEEL	✓	✓	✓	✓	✓

FEATURES



3 LEDS TO ILLUMINATE THE WORK ZONE

BATTERY WITH CHARGE INDICATOR

SMOOTH TRIGGER AND GRIP

UPSIDE-DOWN STAND

REFERENCES

Accessoires inclus :

- 5 nosepieces and mandrels M3-M4-M5-M6-M8 for blind nuts.
- 1 belt hook.
- 1 rigid carrying case.

REFERENCE	COMPOSITION			
	NUT TOOL E-8	BATTERY18V Li-Ion -2.0Ah	QUICK CHARGER 18V	ACCESSORIES
E-8-2XBAT	1	2	1	1
E-8-1XBAT	1	1	1	1
E-8-BODY	1			1
E-BATT		1		
E-CHARG			1	

In option :

- Female mandrel for blind rivet studs




M4	E-8-TIGEFEM-M4
M5	E-8-TIGEFEM-M5
M6	E-8-TIGEFEM-M6
M8	E-8-TIGEFEM-M8



rigid carrying case

OPERATING INSTRUCTIONS

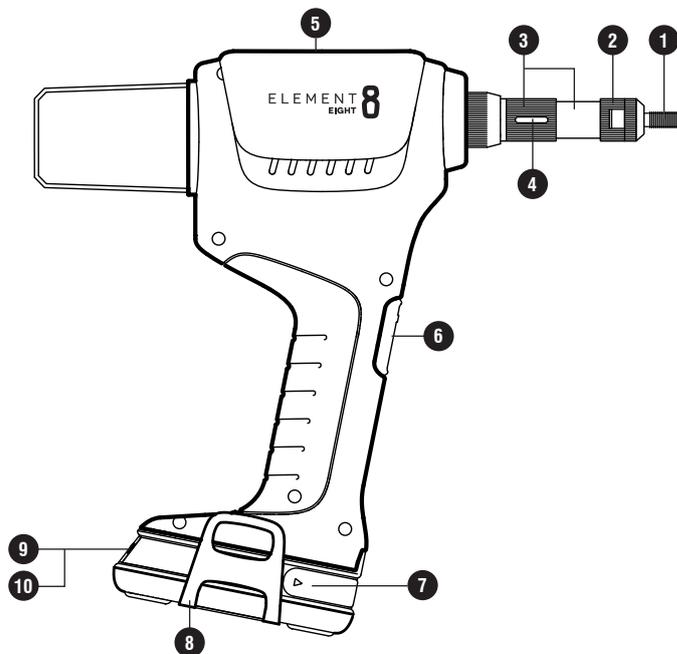

- 1 Mandrel
- 2 Anvil and locknut
- 3 Stroke set with serrations
- 4 Hole to release jammed nut
- 5 Tool body
- 6 Button
- 7 Battery switch
- 8 Belt clip
- 9 Battery level check button
- 10 Battery level indication

• **ADJUSTING THE TOOL:** See user manual.

• **BLIND NUT INSTALLATION:**


Before installation first carry out the 'tool setting'.

- Insert nut in to the hole and verify that hole/nut/tool are well aligned.
- Press the button during the whole installation cycle (*about 1 second*).




IMPORTANT :


Accompany the automatic unscrewing by pulling the tool back slightly.

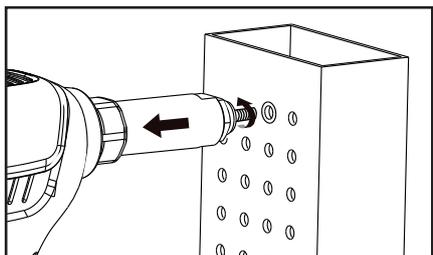

• **CHANGE MANDRELS:**

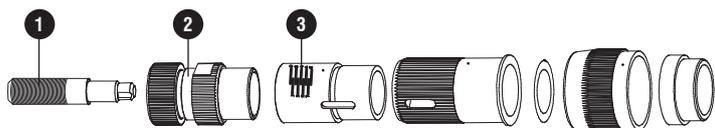

- Remove the battery.
- Unscrew and remove the piece 2.
- Roll up the stroke set 5 then unscrew the mandrel 1.
- Replace the mandrel.
- It is recommended to oil or grease the mandrel before use in order to prevent premature wear.

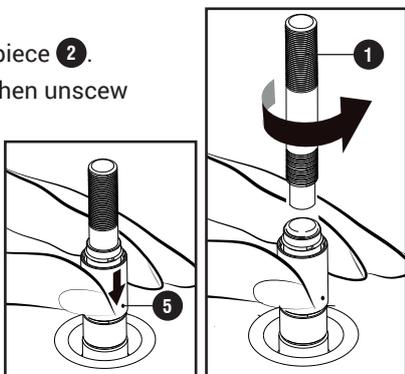

• **BATTERY LEVEL INDICATOR:**

4 lights on the battery panel allows you to check the remaining power. Press and hold the blue button to check the battery level :



The information on the battery panel can vary (+/- 5%) due to environmental conditions.



Red light on the charger: the battery has to be charged



Green light on the charger: the battery is fully charged

• **REMOVE THE BATTERY:**

Battery 5 is locked to the riveting tool with a spring. To remove the battery, press the 2 unlock buttons 6 and slide the battery.

• **LED LIGHTS:**

The tool is equipped with 3 powerful LED lights to enlight the work place.



Turn on the light only

Press the trigger half way to turn on the light. The lights will shutdown after 10'.

Turn on the tool with the lights on

Press the trigger to set the rivet/blind nut. The lights turn on and remain on until 10' after the trigger is released.

MAINTENANCE / TROUBLESHOOTING / SAFETY INFORMATION

See user manual.